

Surfaces and Interfaces

University of Cambridge Part II Natural Sciences Tripos

Yue Wu

*Yusuf Hamied Department of Chemistry
Lensfield Road,
Cambridge, CB2 1EW*

yw628@cam.ac.uk

Acknowledgements

Nothing in these lecture notes is original. They are largely based on the notes by Prof. Stuart Clarke, Dr. David Madden and Prof. Stephen Jenkins, who lectured this course or wrote the official handout in 2025. They are nowhere near accurate representations of what was actually lectured, and in particular, all errors are almost surely mine.

Contents

1	Surfaces and Interfaces	1
1.1	Surface Tension and Surface Free Energy	1
1.2	Contact Angle	4
1.3	Calculation of Free Energies of Interfaces	5
2	Surface Measurement Techniques I	7
2.1	Vibrational Spectroscopy	7

1 Surfaces and Interfaces

In this course we are concerned with the boundary between two phases.

Definition 1.1. A *surface* is the boundary between a condensed phase (solid or liquid) and a vapour (or vacuum) phase. An *interface* is the boundary between two condensed phases.

However, it is not uncommon to loosely call both of them “surfaces”.

This course can be loosely divided into three parts. The first part is mainly concerned about wet interfaces, the second part is mainly about dry, solid surfaces, and the final part is on adsorption.

Let’s first investigate some basic properties of the surfaces.

1.1 Surface Tension and Surface Free Energy

The creation of surfaces and interfaces often come with energy costs. This is known as the *surface free energy* (or just *surface energy*). This is easily understand if we consider a crystal structure in which there are cohesive interactions between neighbouring atoms holding materials together. A surface molecule has fewer neighbouring molecules compared with the bulk, so in order to create a surface, energy must be supplied to compensate the reduction of cohesive interactions.

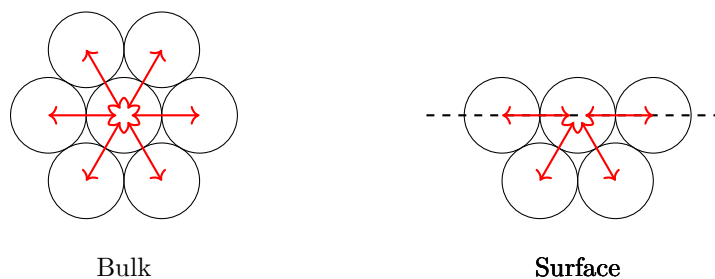


Figure 1.1: In this simple model of 2D closed pack circular atoms, a bulk atom would form 6 favourable cohesive interactions with neighbouring atoms, while a surface atom can only form 4 such interactions.

Suppose the cohesive interaction is pairwise additive, and the (negative) cohesive energy between two neighbouring particles A is ϵ_{AA} . The interaction with any particles further than the first neighbours are negligible. The bulk coordination number is $z_{A,bulk}$ and the surface coordination number is $z_{A,surf}$. Then the (positive) bulk cohesive energy per particle is

$$E_{A,bulk} = \frac{\Delta H_{vap,A}}{N_a} = -\frac{z_{A,bulk}\epsilon_{AA}}{2}, \quad (1.1)$$

and so we may calculate ϵ_{AA} experimentally by

$$\epsilon_{AA} = -\frac{2\Delta H_{vap,A}}{z_{A,bulk}\epsilon_{AA}N_A}, \quad (1.2)$$

where N_A is the Avogadro’s constant. Similarly, the cohesive energy per surface molecule is

$$E_{A,surf} = -\frac{z_{A,surf}\epsilon_{AA}}{2}. \quad (1.3)$$

We assume that the nearest neighbour spacing in the surface is approximately the same as the bulk, so the nearest neighbour interaction energy ϵ_{AA} is unchanging. Because $z_{A,surf} < z_{A,bulk}$, we clearly

reduce the cohesive energy by bringing a bulk particle onto the surface. This change in the cohesive energy per molecule is

$$\delta E = E_{A,\text{bulk}} - E_{A,\text{surf}} = -\frac{1}{2}(z_{A,\text{surf}} - z_{A,\text{bulk}})\epsilon_{AA} . \quad (1.4)$$

Therefore, if we are creating a surface (e.g. cleaving a metal into two halves), we need to do some work that this proportional to the number of surface atoms formed, and hence proportional to the area δA of the new surface.

$$\delta w = \gamma \delta A . \quad (1.5)$$

The proportionality constant is the *surface free energy*. It has both entropic and enthalpic contribution, but for solids, the entropic change is usually negligible. By (1.4), we may estimate γ by

$$\gamma = -\frac{1}{2}(z_{A,\text{surf}} - z_{A,\text{bulk}})\epsilon_{AA} N_s , \quad (1.6)$$

where N_s is the number of molecules per surface area. Note that γ is positive.

Example. Consider a fcc crystal, for which the bulk coordination number is 12 and the (111) surface atom coordination number is 9.

If we denote the close pack distance as a , then the area per surface atom is $\frac{\sqrt{3}}{2}a^2$, and so

$$N_s = \frac{2}{\sqrt{3}a^2} . \quad (1.7)$$

Hence, the surface free energy of an fcc (111) surface is

$$\gamma(111) = -\frac{3}{2}\epsilon_{AA} = -\frac{\Delta H_{\text{vap}}}{2N_A\sqrt{3}a^2} . \quad (1.8)$$

Unlike the surface energy, the *interface* energy can either be positive or negative, depending on the relative size of ϵ_{AA} , ϵ_{AB} and ϵ_{BB} , where A and B denote the two types of particles of the two interfaces. If the interface energy is positive, i.e. the formation of interface unfavourable, then the interface will shrink to a minimum possible area. If it is negative, then the interface will tend to grow and the phases will tend to dissolve in one another. Due to the entropy contribution which we have so far ignored, dissolution may occur even if the surface energy (enthalpic) is slightly positive.

From how we defined the surface energy γ , it is clear that it should have dimension J m^{-2} . This is also be rewritten as N m^{-1} , force per unit length. This hints that the surface energy may have some alternative interpretations. Let's imagine a soap film suspended on a wire loop with one of its sides movable.

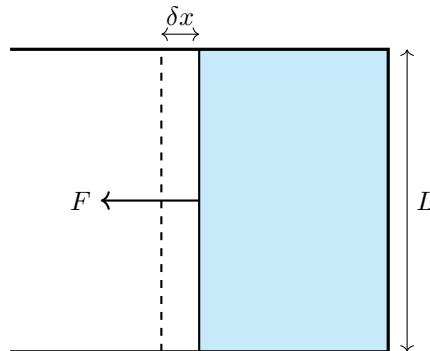


Figure 1.2: A soap film in a wire loop.

The soap film wants to contract in order to minimise its surface area, therefore exerting a force F on the movable side. If we pull this side with force F by a distance δx , remembering that the film has two surfaces (up and down), the total increase in area is $2l\delta x$, and hence the work needed to create this surface is

$$\delta w = \gamma \delta A = 2\gamma l \delta x. \quad (1.9)$$

The force exerted by the two surfaces of the film on the side of length l is therefore

$$F = \frac{\delta w}{\delta x} = 2\gamma l, \quad (1.10)$$

where each surface exerts a force

$$F = \gamma l. \quad (1.11)$$

Hence, the *surface tension*, defined as the force exerted by a surface per unit length, is exactly the surface free energy

$$\gamma = \frac{F}{l}. \quad (1.12)$$

For liquid-liquid and liquid-vapour interfaces, the equilibrium values of γ is independent of the direction, so the surface tension is uniform. This is different for solid interfaces.

The number of surfaces molecules is usually a very small fraction of those in the bulk. It makes an important contribution only

- (i) for a process where the bulk energy does not change;
- (ii) for very small particles (\sim nm) where the surface energy becomes comparable to the bulk energies.

1.1.1 Measurement of Surface Tension

The most common method of measuring the surface tension is to use a *Wilhelmy Plate*. Suppose the dry weight of the plate is W_0 , and when dipped into water, the measured weight becomes W . Suppose the buoyancy force is negligible and the contact angle is 0° (extra terms will be introduced into the equation without those assumptions), then the surface tension is

$$\gamma = \frac{W - W_0}{t}, \quad (1.13)$$

where t is the wetted length.

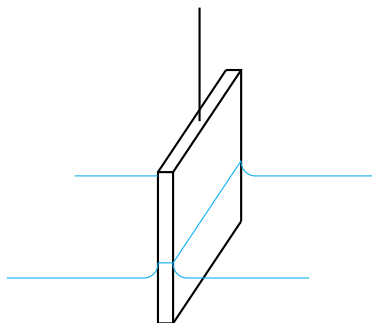


Figure 1.3: A Wilhelmy plate.

1.2 Contact Angle

One of the most common interfacial systems in everyday life is a single drop of water on a solid surface. In some cases the drop will spread and completely cover the surface, in which case we say the water completely *wet* the surface. In other cases the water will form a droplet on the surface. In this case the water does not completely wet the surface.

We characterise the wetting nature of such a solid/liquid/gas combination by the *contact angle*, θ , illustrated in the figure below. It is defined to be the angle between the surface plane and the tangent to the fluid surface at the point of contact. Take care that this angle is measured inside the liquid phase.

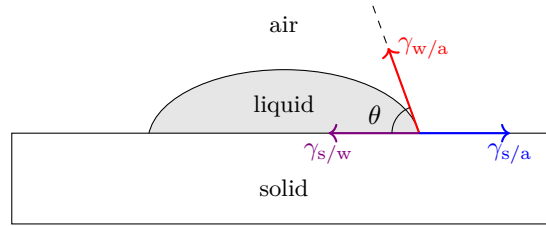


Figure 1.4: A liquid droplet on a solid surface. The phase labelled ‘air’ may be another liquid phase, in which case the corresponding interfacial tensions should be used.

The contact angle results from the three interfacial free energies at the contact point all trying to reduce their surface area. Having identified the surface energy being the same as the surface tension (force per unit length), we can see that the horizontal components of the three surface tension forces should also balance at the point of contact, otherwise the point of contact would move and the system is not in equilibrium. This gives us the *Youngs equation*

$$\gamma_{s/a} = \gamma_{s/w} + \gamma_{w/a} \cos \theta. \quad (1.14)$$

The contact angle is a measure of ‘wettability’. If the water does not like the surface (high $\gamma_{s/w}$), then the drop can avoid contacts with the surface by increasing the contact angle. In the upper limit of $\theta = 180^\circ$, we say the surface is completely dry. On the other hand, if $\gamma_{s/a} \geq \gamma_{s/w} + \gamma_{w/a}$, the formation of a liquid layer in between the solid/air surface is clearly energetically favourable, so the contact angle would be 0° . In this case we say the surface is completely wet, or it spreads on the surface. For $0^\circ < \theta < 90^\circ$, the surface is incompletely wet and for $90^\circ < \theta < 180^\circ$, the surface is incompletely dry. A common hydrophobic material in everyday life is Teflon (PTFE) which has a contact angle with water of 120° .

1.2.1 Rough Surfaces

The Youngs equation holds for flat surfaces. When the surface is rough, an approximate equation for the contact angle actually observed is given by

$$\cos \theta_{\text{obs}} = r \cos \theta_{\text{flat}}, \quad (1.15)$$

where r is the roughness ratio given by the ratio between the actual and projected solid surface area of a surface. It is unity for a flat surface and greater than one for any surface not completely flat. This equation is based on the assumption that the liquid penetrates into the valleys of the rough surface. Note that the direction of the change in apparent contact angle depends on value of the contact angle relative to 90° . If the contact angle for the flat surface is bigger than 90° , then the roughness will make the apparent contact angle even bigger, giving rise to *superhydrophobic materials*. However,

if the contact angle of the flat surface is less than 90° , then roughness will decrease the apparent contact angle, leading to *superhydrophilicity*.

We can understand superhydrophobicity (superhydrophilicity) by considering the movement of the water front over a rough surface. As the water moves a short distance across the surface, the actual area of the new, unfavourable contacts is much more than the flat surface. Hence the surface appears to have a much bigger contact angle. This is the origin of the superhydrophobic nature of the lotus leaf.

1.3 Calculation of Free Energies of Interfaces

We usually have tabulated values of surface free energies (i.e. between some phase with the air), but we rarely have the interfacial free energies between any two phases of interests. It would be nice if there is some way to calculate the interfacial free energy from the surface free energies of the two individual phases.

The basic idea would be decomposing the surface free energy into different contributions, and one then estimates these different contributions by a series of measurements using liquids with known behaviours. The overall interfacial free energy between two materials can then be calculated using some combination rules.

1.3.1 Owens–Wendt Method

The Owens–Wendt method decomposes the surface free energy into two contributions: a dispersion term and a polar term

$$\gamma = \gamma^d + \gamma^p. \quad (1.16)$$

Some values for common solids and liquids are shown below.

Material	$\gamma^d / \text{mJ m}^{-2}$	$\gamma^p / \text{mJ m}^{-2}$	$\gamma / \text{mJ m}^{-2}$
Liquids			
hexadecane	27.8	0.0	27.8
α -bromonaphthalene	44.4	0.0	44.4
diiodomethane	50.8	0.0	50.8
ethane diol	29.0	19.0	48.0
formamide	39.0	19.0	58.0
water	21.8	51.0	72.8
mineral oil	25.0	0.0	25.0
olive oil	31.4	1.6	33.0
sunflower oil	33.6	0.0	33.6
Solids			
quartz	52.0	44.0	96.0
glass	42.0	34.0	76.0
PET	35.0	4.0	39.0
PVC	43.0	4.0	47.0
skin	40.0	8.0	48.0
PE	30.0	1.3	31.3
PP	27.0	0.1	27.1
PTFE	17.0	0.6	17.6
stainless steel	33.8	6.2	40.0

For two materials in contact, the interfacial free energy is given by

$$\gamma_{12} = \gamma_1 + \gamma_2 - 2\sqrt{\gamma_1^d \gamma_2^d} - 2\sqrt{\gamma_1^p \gamma_2^p}. \quad (1.17)$$

For the particular case of a liquid drop on a solid in air, the contact angle is

$$\cos \theta = -1 + \frac{2}{\gamma_l} \left(\sqrt{\gamma_s^d \gamma_l^d} + \sqrt{\gamma_s^p \gamma_l^p} \right). \quad (1.18)$$

For example, if one would like to measure the surface free energy of a solid, one can first measure the contact angle of a non-polar liquid (e.g. hexadecane), from which we can calculate γ_s^d . Then we would measure the contact angle of any liquid with non-zero dispersive surface energy, from which we can obtain γ_s^p .

1.3.2 Good-van Oss-Chaudhury Theory

It breaks the surface free energy into a dispersive and a term for acidity (γ^+) and basicity (γ^-), also known as electron acceptor and donating term

$$\gamma = \gamma^d + 2\sqrt{\gamma^+ \gamma^-}. \quad (1.19)$$

The combination rule for the interfacial free energy is

$$\gamma_{12} = \left(\sqrt{\gamma_1^d} - \sqrt{\gamma_2^d} \right)^2 + 2 \left(\sqrt{\gamma_1^+} - \sqrt{\gamma_2^+} \right) \left(\sqrt{\gamma_1^-} - \sqrt{\gamma_2^-} \right), \quad (1.20)$$

and the contact angle in air is

$$\cos \theta = -1 + \frac{2}{\gamma_l} \left(\sqrt{\gamma_s^d \gamma_l^d} + \sqrt{\gamma_s^+ \gamma_l^-} + \sqrt{\gamma_s^- \gamma_l^+} \right). \quad (1.21)$$

2 Surface Measurement Techniques I

As we shall see later, it is often very difficult to study surfaces experimentally. This is because the surface material is usually only a tiny fraction of the bulk, and the surface is sometimes inaccessible when sandwiched between two phases. Ideally, we would want techniques that are *surface specific*, which means that only information from the surface will be detected, and the bulk material will show no signal. In many cases the technique will only be *surface sensitive* with a large contribution from the surface, but there are still some bulk contributions.

2.1 Vibrational Spectroscopy

In the same way that vibrational spectroscopy is a key way of identifying the species present in the bulk, vibrational spectroscopy at a surface is a key method to identify what is adsorbed at an interface and provides key chemical information.

2.1.1 Reflection Absorption Infra-Red Spectroscopy

The first method we introduce is the *reflection absorption infra-red spectroscopy (RAIRS)*. In this method an IR beam is bounced off the surface of interest, and the absorption at each wavelength characterized in the usual way. This method *per se* is neither surface specific nor surface sensitive: both the surface and the bulk materials would absorb the beam. However, we have many ways to enhance the contribution from the surface to make it more surface sensitive.

For example, if we are interested in the adsorption of molecules on a solid-liquid interfaces, after a molecule is strongly adsorbed to the solid surface, the bulk fluid will be removed hence there is rather little bulk fluid material to adsorb the IR other than the molecules at the surface.

Usually this experiment is performed at grazing incidence so there is a long footprint of the IR beam to enhance the surface contribution. There is also a geometric term that enhances the surface IR signal when the IR beam is at grazing incidence.

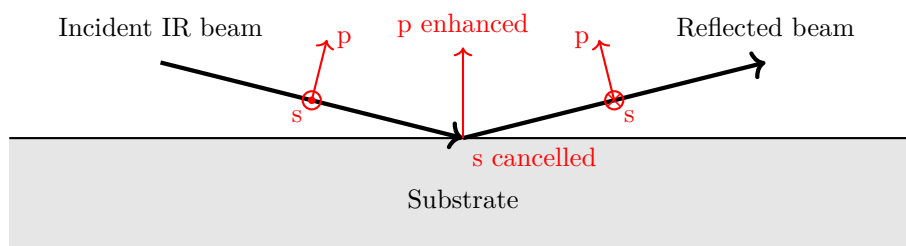


Figure 2.1: Experimental setup of RAIRS where the beam is incident at grazing angle. The s polarised beam is diminished on a conducting surface.

As we all know from A3: *High Resolution Molecular Spectroscopy*, to show a IR spectrum, a molecule must have a changing dipole moment during the vibration. For RAIRS on conducting surfaces, we have a stronger selection rule known as the *surface selection rule*. It states that RAIRS can only observe dipole moments oriented perpendicular to the surface. There are two primary reasons for this.

- The electric field must be perpendicular to a conductor surface, as any tangential components of the electric field will cause free charge carriers in the conductor move to remove this tangential component.

This leads to an important concept called “image charge”. For any charge q outside the conductor, there must also be an “image charge” of opposite charge $-q$ at the mirror image position, as shown in figure 2.2. This is created by the movement of charge carriers in the conductor, and is necessary to keep the electric fields perpendicular at the conductor surface.

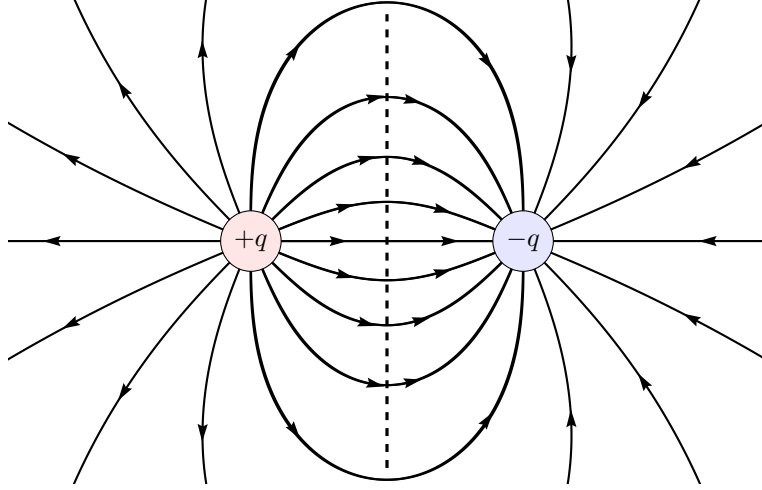


Figure 2.2: An image charge has to be created so that the electric field is perpendicular to the conductor surface.

Therefore, for a dipole parallel to the conducting surface, there will be a image dipole in the opposite direction embedded in the surface that will cancel the source dipole (effectively forming a quadrupole). Therefore, RAIRS is unable to detect any dipole parallel to a conducting surface due to such cancellation. However, if there is a dipole perpendicular to the conducting surface, the image dipole will lie in the same direction such that the original dipole is enhanced. These effects are shown in figure 2.3.

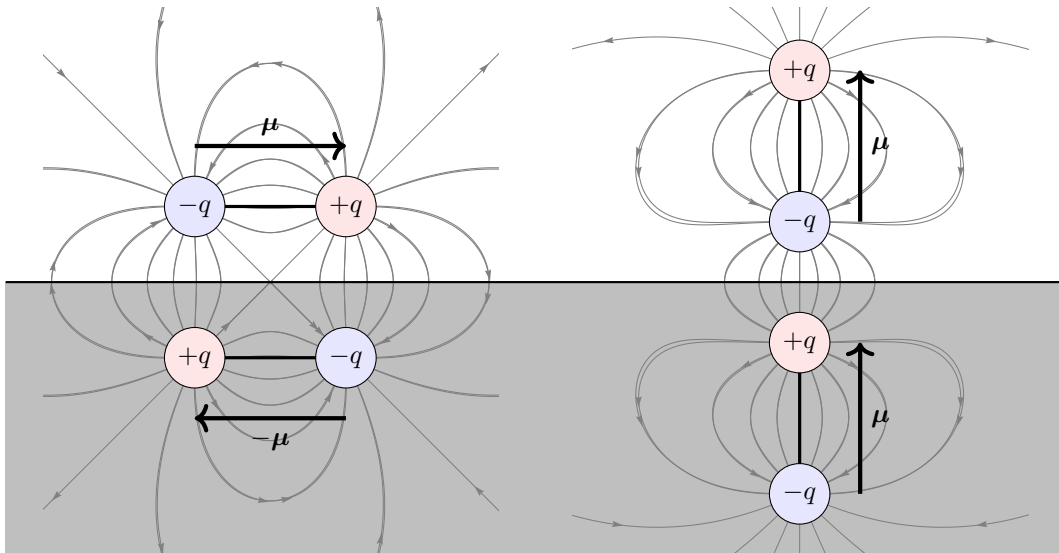


Figure 2.3: The parallel dipoles cancel and the perpendicular dipoles enhance. The electric field lines are also plotted for reference to confirm that they are indeed perpendicular to the conductor surface as requested.

- The polarisation of the IR light can be decomposed into two components: a component perpendicular to the surface (p) and a component parallel to the surface (s). Lights are also oscillating electric fields, so the parallel component (s-polarised light) is cancelled at the surface, while the perpendicular component (p-polarised light) is enhanced. In IR absorption, the orientation of the oscillating dipole moment of the molecule relative to the electric field vector of the incoming IR light determines the interaction strength. If the dipole oscillates parallel to the electric field, then there will be a strong absorption, while if it is parallel, then there will be no absorption. Since only p-polarised light survives, only oscillating dipoles perpendicular to the surface are seen.

One can actually exploit the difference in behavior of s and p polarization lights observed at the surface, which is not observed as a beam passes through a bulk sample, to enhance the surface sensitivity. This gives rise to the method called PM-IRRAS (polarization modulation-infrared reflection absorption spectroscopy).

Low frequency modes ($< 600\text{ cm}^{-1}$) are not generally observable in RAIRS, so hence metal-ligand bonds are not seen. Studies generally focus on the modes in adsorbed chemical groups/species, having frequencies ($600 \sim 3600\text{ cm}^{-1}$).

Example. RAIRS spectrum of MUA.

Below is the RAIRS spectrum of MUA ($\text{SH}(\text{CH}_2)_{11}\text{CO}_2\text{H}$) recorded on gold, with 85° incidence angle, for which the y -axis is the reflectance (percentage of light reflected).

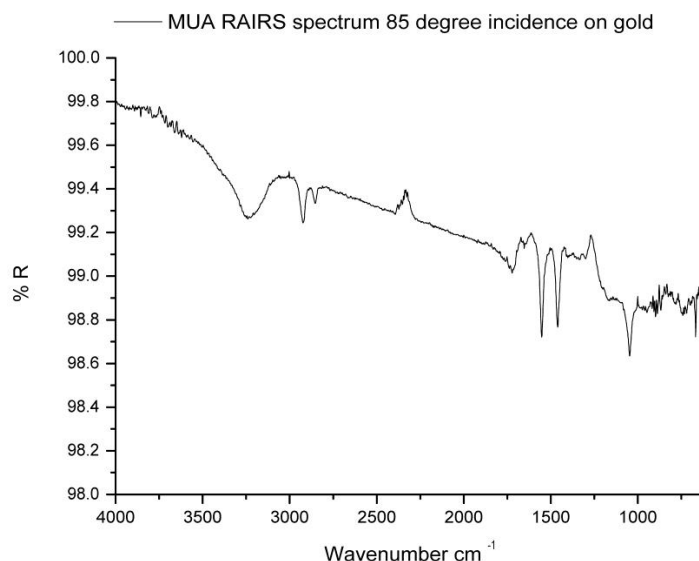


Figure 2.4: RAIRS spectrum of MUA on Au surface.

As pointed earlier, the metal surface selection rule applies so no modes oriented in the plane of the surface are visible. There is a strong O – H stretch at around $3200 \sim 3400\text{ cm}^{-1}$. This could be from water on the surface or residual alcohol from the self-assembly process (a type of chemistry to form molecular layers, the reaction of gold with an alkyl thiol). There are two clear C – H stretches from the alkyl chain, at around $2850 \sim 2950\text{ cm}^{-1}$. There is no hydrogen bonding bands from the acid visible. The thiol S – H ($2550 \sim 2600\text{ cm}^{-1}$) is absent as there is a gold sulfur bond instead (the S – H has reacted). The C = O acid stretch is absent either because it is oriented in the plane of the metal or because the film is present as a carboxylate, as indicated by the symmetric and anti-symmetric carboxylate bands around 1500 cm^{-1} . Note the reflectance value (equivalent to transmittance for a bulk IR spectrum) is very high for the RAIRS spectrum as this is a self-assembled monolayer film, one molecule thick.

Example. RAIRS spectra of glycine.

Below is the RAIRS spectra of glycine dosed on Cu{311} surface at 300 K with increasing coverage, with a table of assignment.

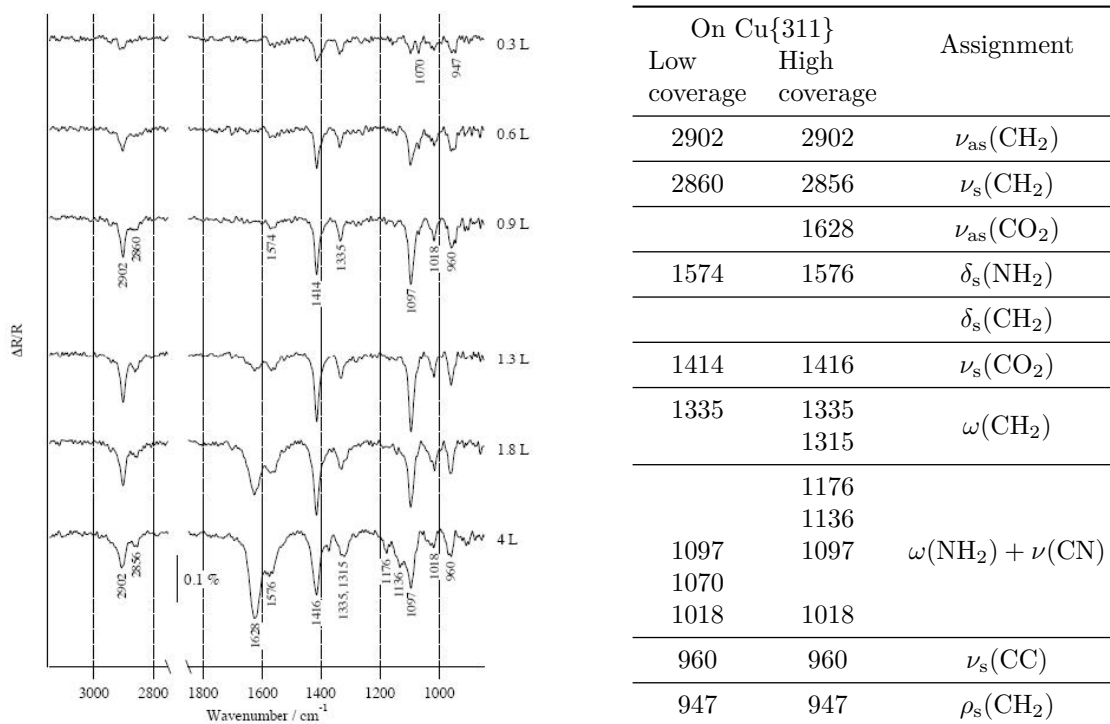


Figure 2.5: RAIRS spectra of glycine on Cu{311} surface at different coverages.

Note that at low coverages (< 1 L), there is a peak at 1414 cm^{-1} (carboxylate symmetric stretch) but not at 1628 cm^{-1} (carboxylate antisymmetric stretch). However, the carboxylate antisymmetric stretch then develops at higher coverages (> 1 L).

This has been interpreted the molecule has the 3-point binding geometry on the Cu surface at low coverages, with O and both O bonded to the surface (see figure 2.6). The two O atoms in carboxylate group are equidistant from the surface, and the transition dipole for the antisymmetric stretch therefore has no perpendicular component. The N – H antisymmetric stretches are absent for the same reason.

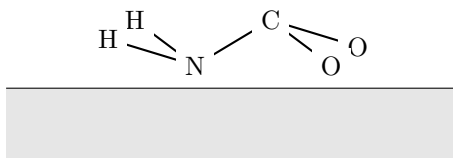


Figure 2.6: Coordination geometry of glycine on Cu{311} surface at low coverages. At high coverages, some molecules will have one of their O to be lifted up.

At high coverages, the surface has become much more crowded, and some glycine molecules have to lift one of their oxygens up. This becomes a two-point binding, with N and only one of the O bonded to the surface. The antisymmetric stretch therefore gains some perpendicular components, and the corresponding peak emerges from the spectrum.

2.1.2 Attenuated Total Internal Reflection Infra-Red Spectroscopy

The next technique is called *attenuated total internal reflection infra-red spectroscopy* (*ATR-IR*). It uses some specific IR-transparent crystal with a high refractive index (higher than the sample), such as diamond, and the surface of the crystal is loaded with the sample of interest. A beam of infra-red light is incident against the crystal in such a way that when it reaches the interface with the sample, the incident angle is larger than the critical angle and so the total internal reflection happens. There is an important “side-effect” of this total reflection called the *evanescent wave*. This means that not all energies of the IR beam are being reflected, and there are some “leakage” of the electromagnetic wave through the interface into the sample. If the sample can absorb this electromagnetic wave (just as in the normal IR spectroscopy), then this energy is taken out of the travelling wave and we can see the corresponding peaks in the spectrum. We can record a stronger spectrum if we allow the beam to bounce off the surface for multiple times. This technique is surface sensitive because the evanescent wave decays exponentially as it passes through the sample, with a lengths scale of a few micrometers (the exact length depends on the wavenumber and materials *etc.*).

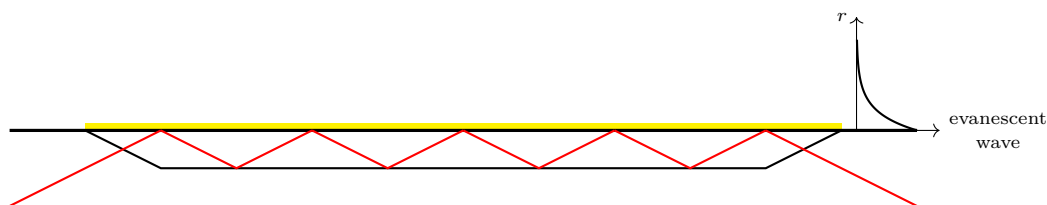


Figure 2.7: Set up of ATR-IR.

Since a special ATR crystal has to be used, the set up of this technique can be quite tricky. For example, if we want to investigate the adsorption of some molecules on the gold surface, we have to first deposit a very thin layer of gold on the ATR crystal, and then we can adsorb our species onto the deposited gold surface.

Example. ATR-IR spectrum of MUA on diamond.

Below is the ATR-IR spectrum of MUA on diamond substrate.

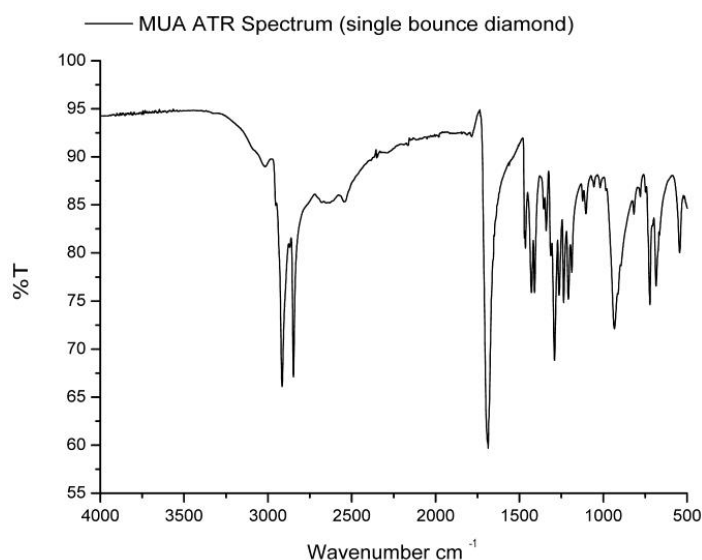


Figure 2.8: ATR-IR spectrum of MUA on diamond substrate.

The main parts of the MUA ATR spectra include the CH_2 stretches between 2800 and 3000 cm^{-1} . Underlying these are the acid hydrogen bonding stretches (often referred to as the old mans beard) from around 2400 to 3300 cm^{-1} . Note the weak thiol SH stretch is present at close to 2550 cm^{-1} , indicating unreacted SH. Finally there is a strong $\text{C} = \text{O}$ stretch from the acid at close to 1750 cm^{-1} . The fingerprint region is dominated by the CH bending modes.

The main differences here compared to the RAIRS data of MUA on gold above reflects the different substrates and deposition methods. Here in the ATR, the MUA is deposited as a bulk sample on the diamond substrate and hence there is no reaction with the surface.

Note that as the wavenumber decreases, the penetration depth of the evanescent wave increases, leading to an increasing effective thickness of the film that is probed. Hence a higher peak intensity is often observed with lower wavenumbers.